

光储一体机配置说明

Sermatec Hybrid Inverter Platform Connection Description


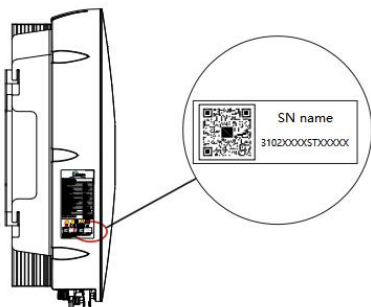


Figure 3-1

1. 用户拿到云平台账号后登录 <https://www.sermatec-cloud.com>，创建电站并添加采集器（采集器 SN 号可询问供应商获得）；

1. After getting the cloud platform account, the user logs in <https://www.sermatec-cloud.com>, creates a power station and adds a collector (the collector SN number can be obtained by asking the supplier);

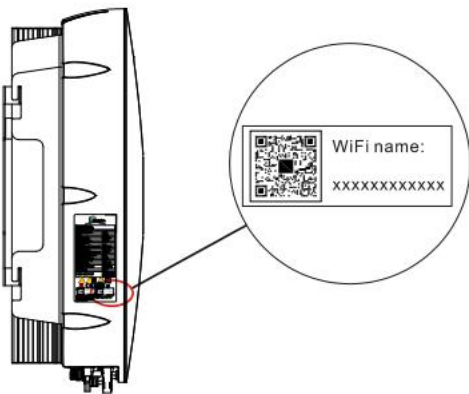

2. 打开手机连接到机器的 WiFi（机器的 WiFi 名称可在机身找到，初始密码 gsstes123456）；

2. Click the app to connect to the WiFi of the machine (the WiFi name of the machine can be found in the body, and the initial password is gsstes123456);

Server Settings

Server IP >

Server Port >

Send Parameters


3. 打开 app 连接机器，进入设置界面
3. Click app to connect to the machine and enter the setting interface.

1) 中国服务器设置：在服务器 IP 输入框输入 114.55.171.15，服务器端口输入框输入 19042, 点击下载参数；

欧洲服务器设置：在服务器 IP 输入框输入 8.209.71.159，服务器端口输入框输入 19042, 点击下载参数；

China Server Settings: input 114.55.171.15 in the server IP box, and 19042 in the server port input box,Send parameter;

European Server Settings: input 8.209.71.159 in the server IP box, and 19042 in the server port input box,Send parameter;

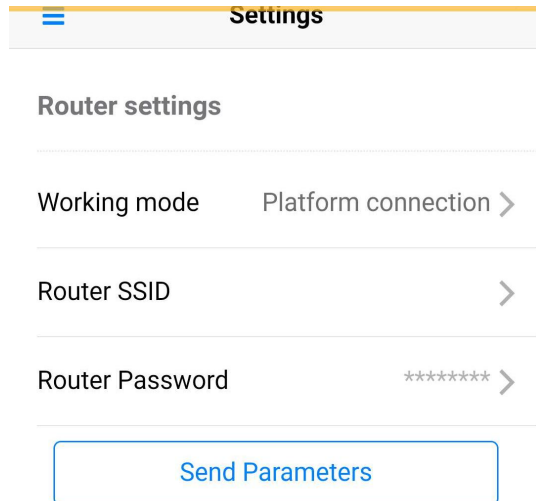

The screenshot shows the 'Settings' menu with a sub-section for 'Router settings'. It includes three configuration items: 'Working mode' set to 'Platform connection', 'Router SSID', and 'Router Password' (masked with asterisks). A 'Send Parameters' button is located at the bottom of the settings list.

2)路由器设置: 选择工作模式为平台连接方式, 填写路由器的名称与密码(路由器名称与密码只能包含英文字符或数字), 点击下载参数

2)Router setting: Select the working mode as the platform connection mode, fill in the router name and password (the router name and password can only contain English characters or numbers), Send parameters;



上海采日能源科技有限公司